

METAL CARD ACCEPT

Installer PIN: #881122

1) Install Cards

Installer PIN →5 →XXX →Flash first card # →5 →XXX →Flash second card # →.....END#

Note: XXX is last 3digits number of card

2) Delete Card

a) Installer PIN →7 →Card last 3 Digit ##

b) Installer PIN →7 →Flash card ##

3) Add/ Changing User PIN

Installer PIN →3 → 4 Digit pin #

Release Door: Press→ 4 Digit PIN

5) Door Release Time (default 3sec)

Installer PIN→2 →XX # (00-99sec)

6) Changing Installer Code (Installer PIN is 6 Digit)

Installer PIN→0 →XXXXXX →XXXXXX

7) Setting Door Open Detection

Installer PIN→

a) 6 0 ## (disable) ---default

b) 6 1 ## (enable)

8) Resetting To Factory Default Setting

Short the "J2 RST" jumper will listen "bi...bi...bi... 3 sound

